

Air fryer 5L



USER MANUAL - BRUKSANVISNING - BRUKSANVISNING - KÄYTTÖOHJE - BRUGSANVISNING

READ ALL INSTRUCTIONS BEFORE USE. SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

LES ALLE INSTRUKSJONENE FØR BRUK. TA VARE PÅ DISSE INSTRUKSJONENE FOR FREMTIDIG
BRUK

LÄS ALLA INSTRUKTIONER FÖRE ANVÄNDNING. SPARA DESSA INSTRUKTIONER FÖR
FRAMTIDA BRUK

LUE OHJEET ENNEN KÄYTTÖÄ. SÄILYTÄ NÄMÄ OHJEET MYÖHEMPÄÄ TARVETTA VARTEN

LÆS HELE VEJLEDNINGEN FØR BRUG. OPBEVAR DENNE VEJLEDNING TIL FREMTIDIG BRUG

 
 
Important safeguards

⚠ Warning

- Before using your air fryer, read all safety instructions and warnings.
- To avoid electric shock, check if the voltage in your home matches the voltage on the appliance. Always use a grounded socket.
- Do not use adapters or extension cords. To avoid fire hazard, remove all packaging from the air fryer including all temporary labels.

Safety and Precautions


- Place the air fryer in a dry environment. This product is for home use only, do not use it outdoors.
- To avoid contamination of furniture by fumes or fire caused by heat during operation of the product, please keep a certain distance from walls and cabinets.
- Please place the air fryer on a flat surface with heat insulation. Keep the air fryer at least 10cm or 4 inch away from the wall and the surface to ensure air circulation.
- Do not place the air fryer near flammable materials or heat sources, and keep it away from curtains and other similar items to avoid fire.
- **WARNING: Do not immerse the wire, plug or body in water or other liquids to prevent electric shock.**
- Avoid the power cord entangled with the body, and do not contact with other hot bodies such as high-temperature gas, electric heaters, heating lamps, or heating appliances.
- NEVER pull the power cord. You need to unplug before moving the air fryer, and use both hands to move the air fryer.
- Do not move the air fryer when there is oil with high heat or other liquid inside the air fryer.
- When using the air fryer, the product should not be covered with flammable items (such as cloth, paper, plastic, etc.). Do not store such items in the air fryer to avoid fire hazards.
- To avoid fire or injury, please use the supporting accessories provided by the manufacturer. Do not put accessories not provided by the manufacturer in the

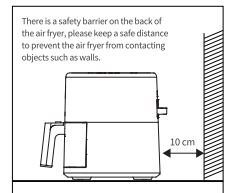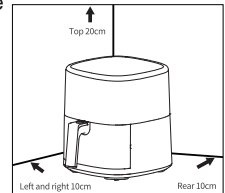


product, or use accessories not recommended by the manufacturer.



 - Please wear oven gloves when putting in or taking out the food
- Do not touch the outer surface of the air fryer when it is hot during or after use.
- When cleaning the air fryer, unplug it and wait until it cools down to room temperature.
- Use a soft, damp cloth to clean the air fryer. To prevent damage, do not use sharp cleaning instruments.
- Never allow children to operate the product. The air fryer should be placed out of the reach of children.
- Never use the air fryer for other purposes than heating or defrosting food.
- To avoid fire, never place any objects on the top of the air fryer when it is operating. Never heat the closed container in the air fryer to avoid explosion.
- After using the air fryer or when it is not used for a longtime, turn it off and unplug the power plug. This product cannot be operated with an external timer or remote-control system.
- When heating food, leave enough space in the container to prevent the liquid from boiling and pouring. When using glass or metal containers, be careful to prevent danger or burns.

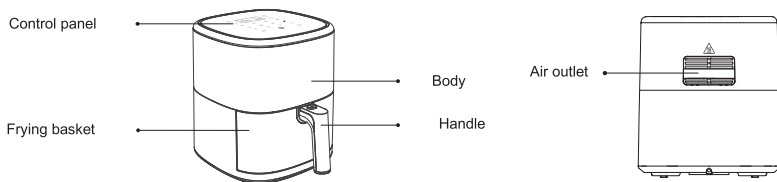Product description

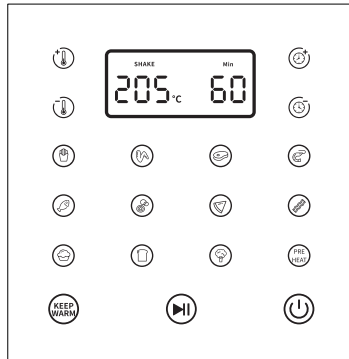 

Control panel




	On/Off
	Start/Pause
KEEP WARM	Press to keep warm and press the "⌚" or "⌚" buttons to change the time
PRE HEAT	Press the button and the display will show "205°C" and "5 Min"
205 °C	Display cooking temperature
MIN 60	Display cooking time
⌚ ⌚	Press to adjust temperature or time
⌚ ⌚	Long press to quickly adjust temperature or time
SHAKE	The icon "SHAKE" will flash, to remind you to shake, mix or flip the food
End	" End " will be shown when the cooking ends

Before First Use


⚠ Warning

- Remove all packaging of the air fryer, including all temporary labels.
- To avoid burns wear heat-insulating gloves when taking out the food.

 - ❶ Plug in the power supply and pay attention to the placement position to keep a distance of at least 10cm or 4 inches from the surrounding walls or furniture.

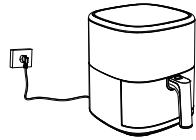

 
- ❷ Put the ingredients on the crisper plate or other related accessories, put them into the cavity of the air fryer and close the door.

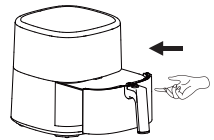

- ❸ Touch to select one of the recipes on the display. You can also adjust the time and temperature as you like and touch to start cooking.



 - ❹ Take out the food after cooking. Be careful not to burn yourself. Turn off the air fryer after use.

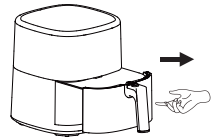

Using Your Air Fryer

Preheating

We recommend preheating the air fryer before placing in the food, unless the air fryer is already hot. Preheating will make the cooking more effective.

- 1 Plug in and press "⏻" to turn on.
- 2 Press the "Preheat" button. The display will show "205°C" and "5 Min".
- 3 Press "+" or "-" button (optional) to adjust the temperature. The time will adjust automatically.
- 4 Press "▶" to start preheating.
- 5 The air fryer will beep when preheating is done.

Temperature	Time
205°C	5 minutes
200°C	5 minutes
195°C	5 minutes
190°C	4 minutes
185°C	4 minutes
180°C	4 minutes
170°C	4 minutes
165°C or lower	3 minutes

⚠ Attention:












- Do not place any objects on the top of the air fryer. Otherwise, it will disturb the airflow and affect the cooking effect.
- Do not pour cooking oil, frying fat or any other liquid into the air fryer.
- Be careful of hot steam when removing food from the air fryer.
- Actual cooking results may vary. Please refer to the frying guide and recipe to customize your recipes.

Cooking

- 1 Turn on the air fryer.
- 2 Touch to select one of the recipes. You can also adjust the time and temperature as you like.
- 3 Press "▶" to start cooking.
- 4 The air fryer will beep when finished.

Range of temperature: 75-205°C



Range of time: 1-60min


Symbol	Preset	Preset Temperature	Preset Time*	Supplementary Functions**
	Shrimp	190°C	6 min	
	French Fries	195°C	20 min	SHAKE
	Wings	195°C	25 min	SHAKE
	Steak	205°C	6 min	
	Vegetable	150°C	10 min	SHAKE
	Fish	175°C	8 min	
	Onion Rings	190°C	20 min	SHAKE
	Pizza	175°C	8 min	
	Bacon	160°C	8 min	
	Cake	150°C	30 min	
	Toast	195°C	3 min	

*The preset time is a reference value. We kindly recommend you to adjust the cooking time according to the weight of the food.

**Supplementary functions marked with SHAKE means that the recipe will automatically remind you to shake, mix or flip the food during cooking.



Keep Warm

- 1 Turn on the air fryer.
- 2 Touch to select one of the recipes.
- 3 Press "  "
- 4 Press "  " to start cooking.

Symbol	Preset	Preset Temperature	Range of Temperature	Preset Time	Range of Time
	Keep Warm	75°C	/	5 min	1-60 min

More Functions

Pausing

- Press  to pause frying. The air fryer will stop heating until you press  to continue air frying.
- After 30 minutes of stopping the operation, the air fryer will shut down.

Automatically Resume Cooking

- If you pull out the basket, the air fryer will pause automatically. The display will turn off temporarily as a safety feature.
- When you insert the basket, the air fryer will automatically resume based on your previous settings.

Automatic Shutdown

- If the air fryer has no active cooking programs, it will clear all settings and turn off after 5 minutes of inactivity.

Overheating Protection

- If the air fryer overheats, it will automatically stop for safety. The air fryer can be used again after it has cooled down completely.

Troubleshooting

Serial Number	Error	Possible Effective Solutions
1	The product has a lot of oily smoke when it is fried	<ul style="list-style-type: none"> - Pour off the oil from the fryer and continue to use
2	The food is not fully fried	<ul style="list-style-type: none"> - Appropriately reduce the amount of food. If the food is overfilled, the frying temperature will be insufficient. - Increase the frying temperature or extend the frying time.
3	The food is not cooked evenly	<ul style="list-style-type: none"> - Foods that are stacked on top of each other or close to each other need to be shaken or flipped during cooking (see "Shaking food" on page 7).
4	The food after cooking is not crispy enough	<ul style="list-style-type: none"> - Spraying or brushing a small amount of oil on the food will improve the crispness
5	The French fries are not cooked properly	<ul style="list-style-type: none"> - Cut the fries in smaller strips.
6	The air fryer cannot be turned on	<ul style="list-style-type: none"> - Plug in the power supply correctly. - Close the basket.
7	The air fryer has a plastic smell.	<ul style="list-style-type: none"> - Any air fryer may have a plastic smell from the manufacturing process. This is normal and the smell will dissipate gradually. If a plastic smell is still present, please contact our Customer Support.
8	Error code "E1"	<ul style="list-style-type: none"> - Unplug the air fryer and retry, if the error code "E1" is still displayed, please contact our Customer Support.
9	Error code "E2"	<ul style="list-style-type: none"> - Unplug the air fryer and retry, if the error code "E2" is still displayed, please contact our Customer Support.

Cleaning and Maintenance

This product should be used regularly to maintain the appliance in good working conditions. If not used for a long period of time, please keep this product in a dry and ventilated place to prevent it from getting damp. Store the device in the correct combination for next use.

" Please wash the equipment carefully to keep it tidy. If you do not use it for a longtime, please unplug it and clean it after cooling down.

- Use a special kitchen cleaner (for dishes and cooking utensils) and a soft sponge or rag.
- Please do not use a diluent, scouring powder, bleaching powder, metal spatula, nylon brush, etc. or other corrosive cleaning products to clean the device, this can prevent damaging the frying basket and other accessories.
- Please do not put the main unit into a dishwasher, dryer, etc.
- Please do not excessively scrub the main outer case, empty frying basket, crisper plate to avoid wear and tear.
- Please do not immerse the body of the product in water or pour water on it.

Cleaning of Parts

- Soak in warm water for a while if there is any dirt attached.
- Use a sponge to wash in diluted detergent solution or warm water, and rinse with water.
- The frying basket, crisper plate etc. can be soaked in hot water and then washed, or washed in the dishwasher.
- Wipe off the water with a dry cloth and allow to dry well.
- Do not wipe the heating tube randomly. If the metal heating tube is not used for a longtime, please use a small amount of cooking oil to gently wipe the surface of the heating tube.

Cleaning of the Main Body

- When cleaning the outer case of the main unit, first soak the cloth in the diluted detergent solution, wring it out and wipe the main body. Wipe off the remaining detergent and moisture with a dry cloth.
- When cleaning the inside of the main body, you must unplug the power supply and wipe it with a dry paper towel or dry cloth after the whole equipment has cooled down.

Specifications of Product

Model	31208
Rated power supply	AC 220V-240V 50/60Hz
Rated power	1500W
Capacity	5L
Temperature range	75-205°C
Timing range	1-60 Min
Weight	4.1kg

DISPOSAL OF ELECTRICAL AND ELECTRONICEQUIPMENT (WEEE)

This symbol on the product or in the instructions means that the electrical and electronic equipment according to the European directive (WEEE) must be disposed of separately from other household waste, as they can be harmful to the environment. The countries in the EU have waste collection systems. Contact your local dealer of authority for more information.



Importer/Manufacturer:

F&H Group A/S
Gl. Skivevej 70
DK-8800 Viborg
DENMARK